



Users Manual for Studio Lag HD



①: there are two 2032 Cell batteries to operate the preamp. To install it, remove the cover and pull out the battery holder. Insert batteries to face positive pole toward Volume control.

② When the power is getting low, it will indicate it with LOW.BAT led.

②: Volume control , when turned to + will increase and when turned to – will decrease the volume

③: BASS tone control will increase bass when turned clockwise

④: TREBLE tone control will increase treble when turned clockwise

⑤: Mid tone control will increase mid range when turned clockwise

⑥: SOUNDS/MUTE switch has a multi function. When the cable is plugged in into the endpin, it will show blue(Linear setting) When pushed , it will show green (Acoustic clean), When pushed again, it will show Purple (Rock setting) and last push will show red (jazz setting) When the switch is pushed down for 2 second, it will mute the output. To activate it push the switch again shortly.

⑦ : led to show the sound settings or mute (Yellow)

⑧ : PHASE/TUNER has also multi function. When pushed short, it will change the phase. It is used in case of feedback to eliminate it.

When pushed down for two second, it will activate the tuner. Display ⑨ will show the string and 3 led's on the left side of tuned display will show HI9red) in Tune (Green) and to low (red)

When the Output cable is connected into the endpin socket, power will be on. Disconnect the cable when not in use to preserve the battery