



Users Manual for Direct Lag HD



①: there are two 2032 Cell batteries to operate the preamp. To install it, remove the cover and pull out the battery holder. Insert batteries to face positive pole toward Volume control.

When the power is getting low, it will indicate it with LOW.BAT led.

②: Volume control , when turned to + will increase and when turned to – will decrease the

volume

③: BASS tone control will increase bass when turned clockwise

④: TREBLE tone control will increase treble when turned clockwise

⑤: Mid tone control will increase mid range when turned clockwise

⑥: PHASE switch will change the phase. It is used to kill feedback. It does not change the sound.

⑦: TUNER On/Off switch will activate the tuner. When you use tuner, sound will be muted.

⑧: Display show the string ,and 3 led on left side will show HI for high (red), TUNE will show correct tune (green) and LO indicates that it is to low(red)

When the Output cable is connected into the endpin socket, power will be on. Disconnect the cable when not in use to preserve the battery